

## **INSTALLATION & MAINTENANCE MANUAL**

### **SERIES 83 3-PIECE FULL OR REDUCED PORT BALL VALVES**

#### **1. USE:**

- 1.1 Maximum results and long life of the valves can be maintained under normal working conditions and according with pressure/temperature rating and corrosion data chart.

#### **2. MANUAL OPERATION:**

- 2.1 The opening and closing of the valve is done by turning the lever a ¼" turn (90 degrees).
- A. Valve in Open Position – the lever is in line with the valve or pipeline.
  - B. Valve in Closed Position – the lever is at right angle with the valve or pipeline.

#### **3. DISASSEMBLY & CLEANING PROCEDURE:**

Caution: ball valve can trap fluids in the ball cavity when closed.

- 3.1 If the valve has been used to control hazardous media, it must be decontaminated before disassembly. It is recommended that the following steps are taken for safe removal and reassembly.

- A. Relief the line pressure.
- B. Place valve in half-open position and flush the line to remove any hazardous material from the valve.
- C. All persons involved in the removal and disassembly of the valve should wear the proper Protective clothing, such as face shield, gloves, etc.

**Maintenance of parts is easy, even if the valve is installed in the line:**

By removing all the body bolts except one and loosening the remain one, valve body can be swung out. Seats, gaskets and ball can be replaced without disturbing pipe alignment. On threaded lines, valve can be screwed on without the use of unions, as the three-piece construction makes valve ends free, by removing the bolts.

#### **4. GENERAL INFORMATION FOR INSTALLATION:**

- 4.1 The valve can be installed in any position on the pipeline.
- 4.2 Before installation of the valves, the pipe must be flushed clean of dirt, burrs and welding residues, or the seats and ball surface will be damaged.
- 4.3 The pipe must be free from tension.

#### **5. INSTALLATION OF THREADED VALVES**

- 5.1 Use conventional sealant, such as hemp core, Teflon, etc. on the threads.
- 5.2 Apply wrench only on the hexagon of the valve ends. Tightening by using the valve body or lever can seriously damage the valve.
- 5.3 In some applications, screwed valves are backwelded on site, These valves must be treated as per instructions for weld end valves before backwelding.

#### **6. INSTALLATION OF WELD-END VALVES**

- 6.1 Tack weld the valve on the pipe in four points on both end caps.
- 6.2 With the valve in the open position, (lever to be parallel to the axis of the pipe), remove all the body bolts except one.  
Loosen the nut on the remaining bolt.  
Swing the body outside the pipe.
- 6.3 Finish welding both end caps on the pipe.

# SERIES 83

## NM

SIZE	Full port	Red. port
1/4"	7.8	-
3/8"	7.8	-
1/2"	9.8	7.8
3/4"	9.8	9.8
1"	13.7	9.8
1.1/4"	13.7	13.7
1.1/2"	18.6	13.7
2"	18.6	18.6
2.1/2"	-	18.6

## IN-LBS


SIZE	Full port	Red. port
1/4"	69	-
3/8"	69	-
1/2"	87	69
3/4"	87	87
1"	122	87
1.1/4"	122	122
1.1/2"	165	122
2"	165	165
2.1/2"	-	165

## Torque of Stem Nut

### MATERIALS LIST

NO	PART NAME	MATERIAL	QTY
1	Body	ASTMA351 Gr.CF8M	1
2	End Cap	ASTM A351 Gr.CF8M	2
3	Ball	SUS316	1
4	Stem	SUS316	1
5	Stem Nut	SUS304	2
6	Belleville Washer	SUS304	2
7	Handle	SUS304	1
8	Seat	RPTFE	2
9	Gland	SUS304	1
10	V-Shaped Packing	MG1241	1
11	Stem Seal	RPTFE	1
12	Lock Saddle	SUS304	1
13	Joint Gasket	PTFE	2
14	Bot	SUS304	1
15	Stop Pin	SUS304	1
16	Handle Sleeve	Vinyl	1
17	Bot Nut	SUS304	1
18	Locking Device	SUS304	1
19	Anti-static Device	SUS304	2

- Socket weld and butt weld uses CF8M material
- ⊕ 1 set of v-ring packing consists of 2pcs of v-ring
- For 1/4" to 1 1/2" 4pcs; For 2" 6pcs
- ↑ For 1/4" to 1 1/2" 4pcs; For 2" 6pcs

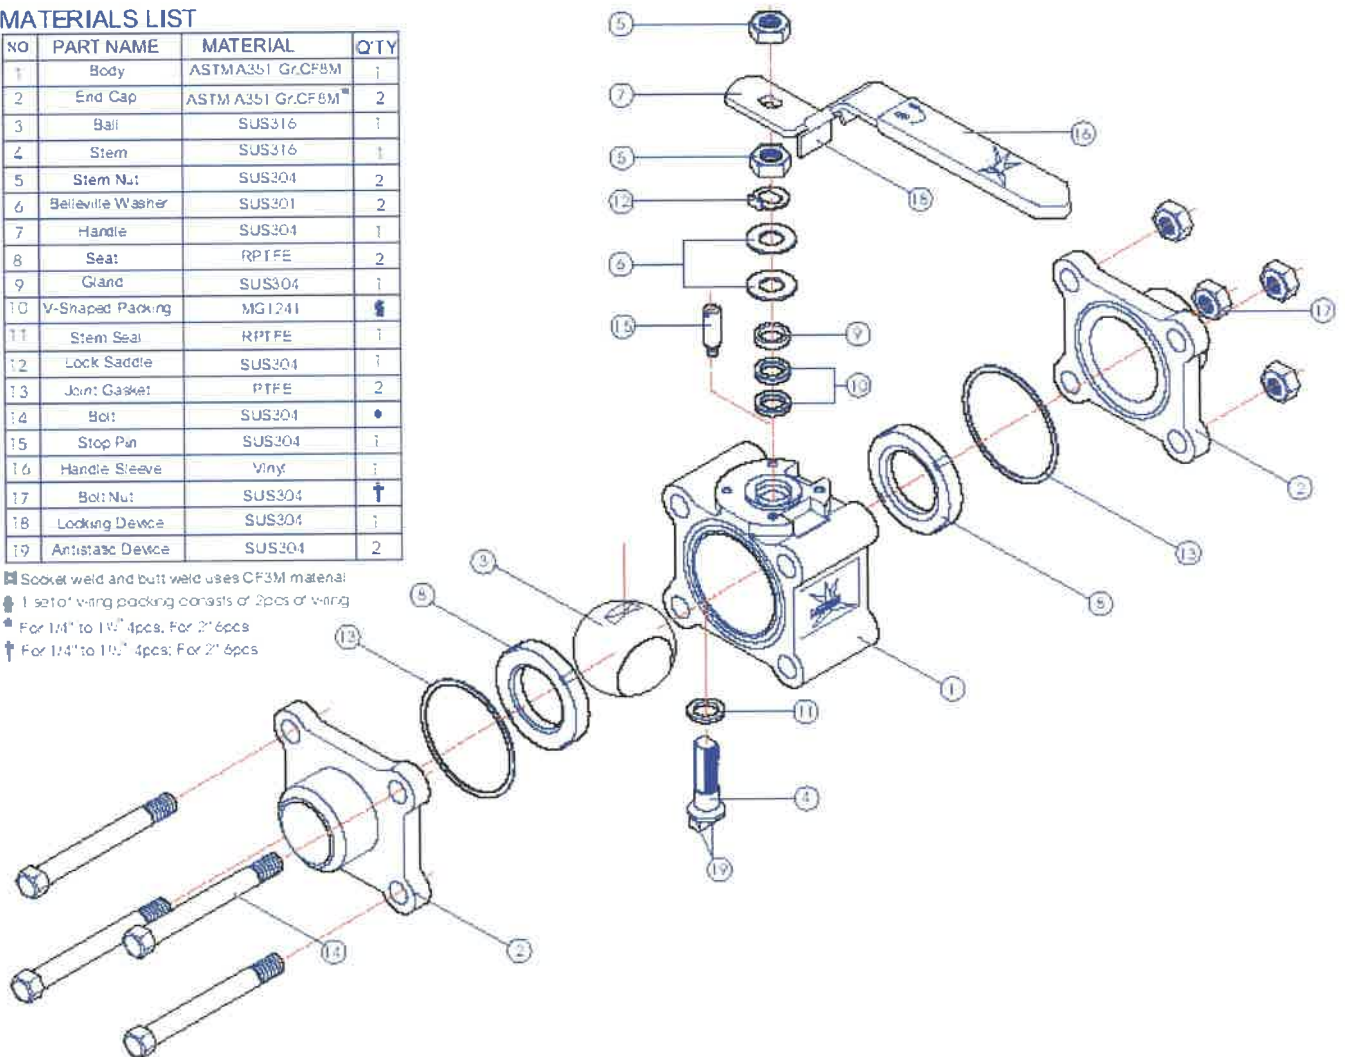

- 6.4 When cooled down, clean both end caps and body surface.
- 6.5 Swing the body back in position and replace the bolts. Tighten all nuts slightly. This Operation is very important, to keep body and end caps perfectly parallel, thus preventing distortion of the end caps.
- 6.6 Tighten body bolts evenly. Make sure that maximum tightening torque is observed.
- 6.7 Check proper operation of the valve.

**BOLT TIGHTENING SPECIFICATIONS**

The body bolts of the valve should be tightened evenly.  
Tighten one-side snugly, then the one diagonal across.  
Repeat for the other bolts, bringing them all down tightly in sequence.

(R-PTFE SEATS)

Valve Size					Break Away Torque					Cv				
Inch	DN	In/Lb	Nm	G. P .M.	Inch	DN	In/Lb	Nm	G. P .M.	Inch	DN	In/Lb	Nm	G. P .M.
1/4"	8	60	7	8	-	-	-	-	-	-	-	-	-	-
3/8"	10	60	7	8	1/2"	15	60	7	8	3/4"	20	70	8	15
1/2"	15	70	8	15	1"	25	92	10	34	1 1/4"	32	127	14	56
3/4"	20	92	10	34	1 1/2"	40	207	23	85	2"	50	276	31	125
1"	25	127	14	56	2 1/2"	65	403	46	250					
1 1/4"	32	207	23	85										
1 1/2"	40	276	31	125										
2"	50	403	46	250										

30% safety factor included.(Full port)

(Reduced port)

**NM**

**IN-LBS**

Series 83		
SIZE	Full port	Red. port
1/4"	10 ~ 11	-
3/8"	10 ~ 11	-
1/2"	11 ~ 15	10 ~ 11
3/4"	14 ~ 18	11 ~ 15
1"	19 ~ 23	14 ~ 18
1.1/4"	22 ~ 25	19 ~ 23
1.1/2"	38 ~ 42	22 ~ 25
2"	42 ~ 46	38 ~ 42
2.1/2"	-	42 ~ 46

Series 83		
SIZE	Full port	Red. port
1/4"	90 ~ 100	-
3/8"	90 ~ 100	-
1/2"	100 ~ 130	90 ~ 100
3/4"	125 ~ 160	100 ~ 130
1"	170 ~ 200	125 ~ 160
1.1/4"	195 ~ 220	170 ~ 200
1.1/2"	335 ~ 375	195 ~ 220
2"	370 ~ 405	335 ~ 375
2.1/2"	-	370 ~ 405

Torque of Body Bolt